LR Light Kit Installation Guide

CONTENTS

Junction Box Diagram 1
Universal Power Supply 1
LR Chair Mount Bracket Installation 2
Mounting Junction Box To Floor *(optional)* 2
Routing the Wire Harness 2

UNIVERSAL POWER SUPPLY

ATTENTION!
If the Universal Power Supply has not been installed, do so at this time. If air pressure to the junction box is not available, you must perform the procedure to '**Bypass The Air Pressure Switch**'. Refer to the Universal Power Supply Installation Guide for this procedure as well as basic installation instructions.

JUNCTION BOX DIAGRAM

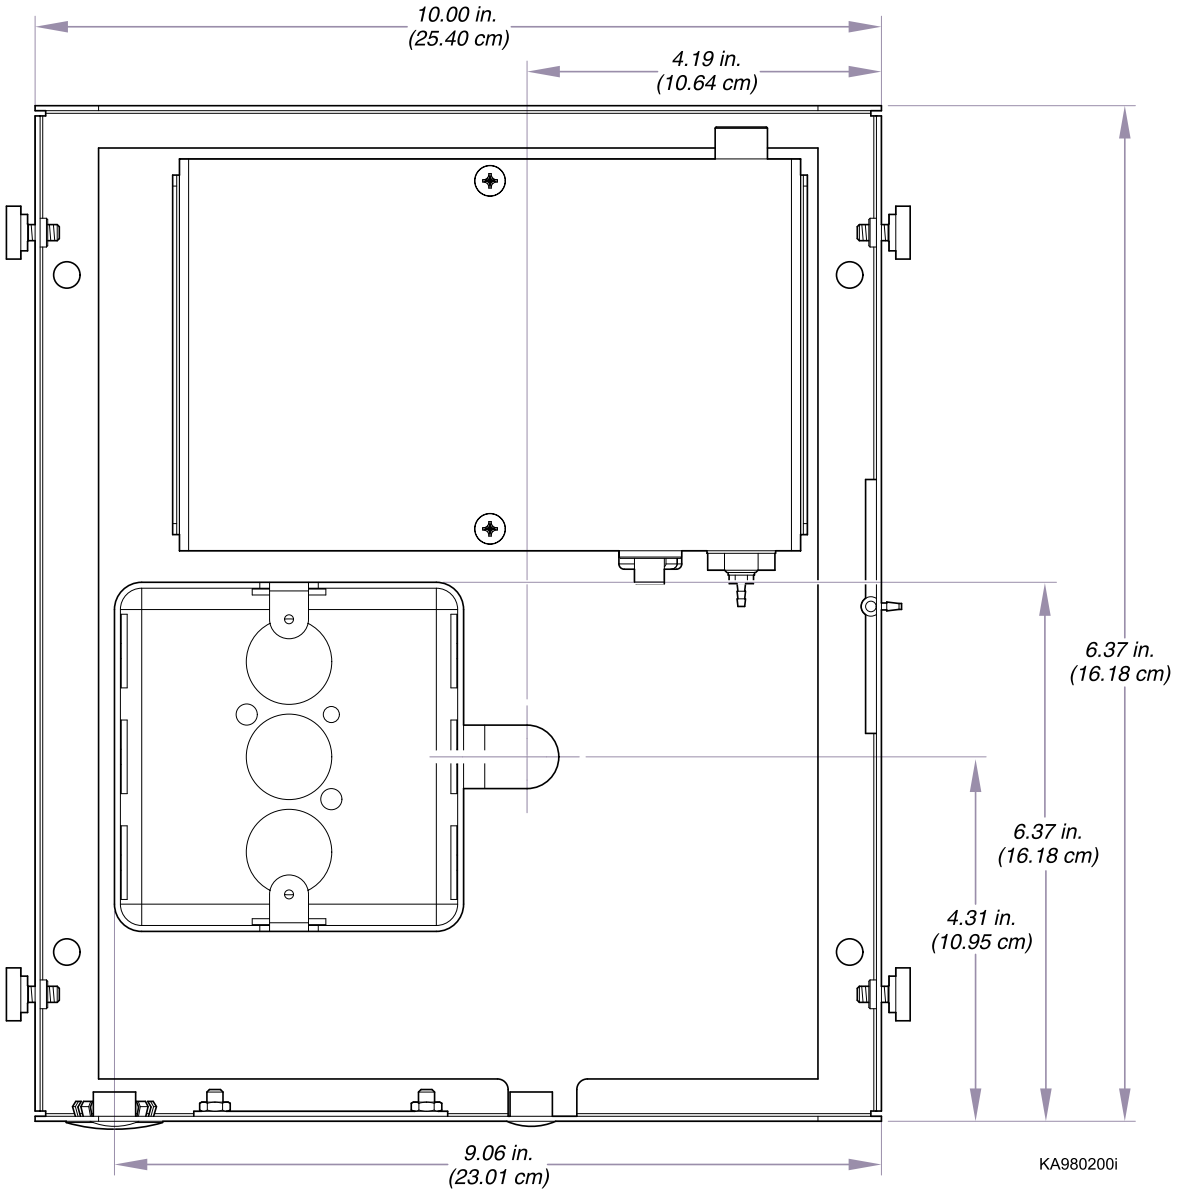

Figure 1. Junction Box Diagram

© Midmark Corporation 2001 SF-1779

LR CHAIR MOUNT BRACKET INSTALLATION

Install Midmark LR Chair Mount Bracket according to installation instruction sheet (003-1306-00).
[Instructions are packaged with bracket]

MOUNTING JUNCTION BOX TO FLOOR
(Optional)

(1) Loosen four thumbscrews (1, Figure 2); then remove cover (2).

EQUIPMENT ALERT
Use appropriate drill bit for floor material (masonry, wood, etc.) when drilling pilot holes in the following step.

(2) Drill four pilot holes into floor thru mounting holes of junction box frame (3).

(3) Secure junction box frame (3) to floor using four screws (4) ***[from parts bag].***

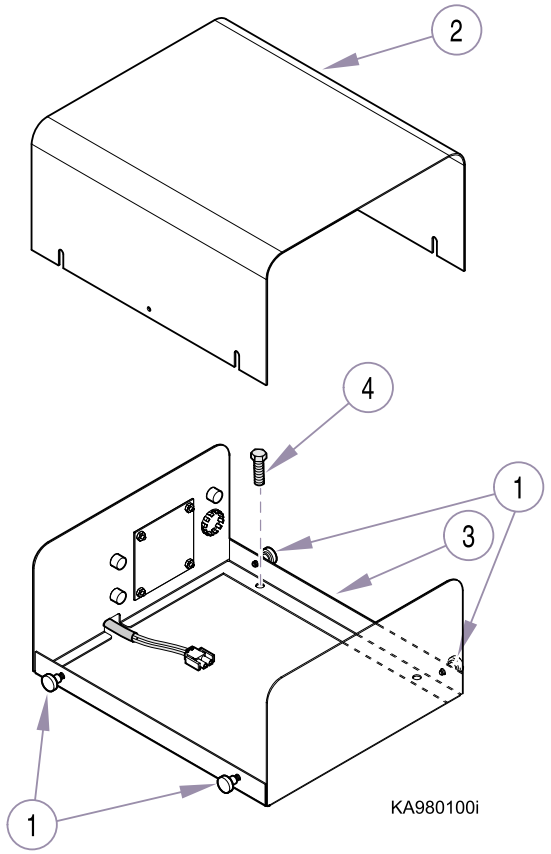

Figure 2. Mounting Junction Box To Floor *(optional)*

ROUTING THE WIRE HARNESS

(1) Feed wire harness (1, Figure 3) ***["white connector end" first]*** down thru hole (A) in top of mount bracket (2); pull out thru hole (B).

(2) With junction box frame (3, Figure 2) in position, route "white connector end" of wire harness thru notch in junction box frame as shown.

(3) Connect wire harness to power supply according to Universal Power Supply Installation Guide (003-1119-00).

(4) Position cover (2) on junction box frame (3); then tighten four thumbscrews (1).

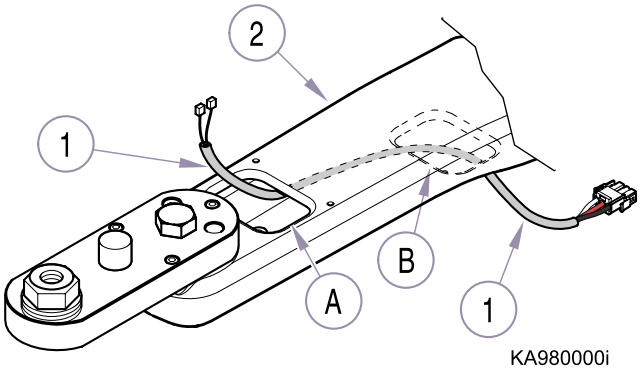

Figure 3. Routing The Wire Harness

© Midmark Corporation 2001 SF-1779